

Handi-KirbTM

GOOF PROOF SHOWER FLOORS


•Proudly Made in the USA•

INSTALLATION INSTRUCTIONS


Instructional Video available on line at:
www.markeindustries.com

STANDARD Mud Bed Installation Using Liquid Membrane


1. Cut curb length to fit shower opening

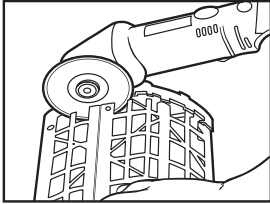


2. After installation of prepitch, pile mud up prior to attaching curb to sub floor

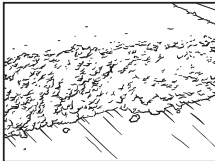


and position curb in place.

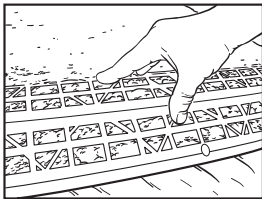

3. Attach Handi-Kirb to concrete floors using 1 1/2" tapcon screws or 1" wood screws on wood sub floors.

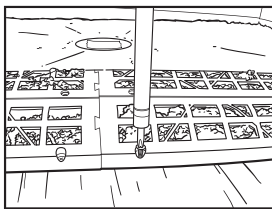

4. Fill Balance of curb-screed smooth.

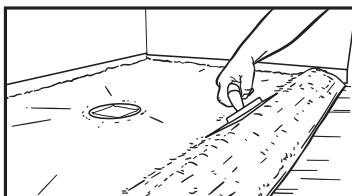


5. Allow cement mix to dry.


6. Install liquid membrane of choice to manufacture's specifications..



7. Install mud bed using Quick Pitch kits,

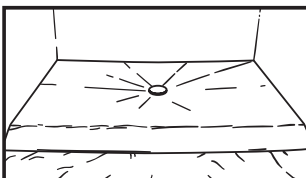


8. Tile

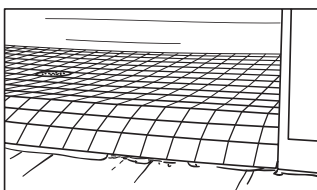


THIN Bed Installation Using Sheet Membrane


1. To create the thin bed curb height cut curb along areas marked.

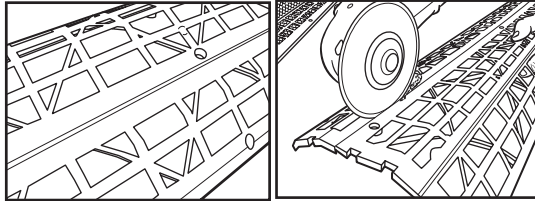


2. Install paper backed wire lath if on wood sub floor.

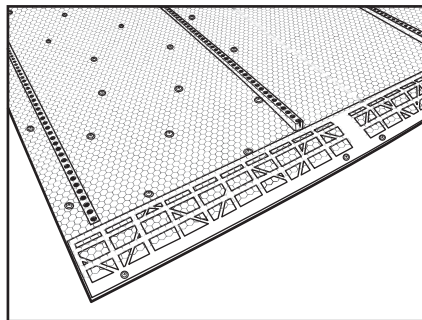


3. Attach Handie-Kirb to wood sub floors with 1" wood screws or 1 1/2" tapcons screws on concrete sub floors.

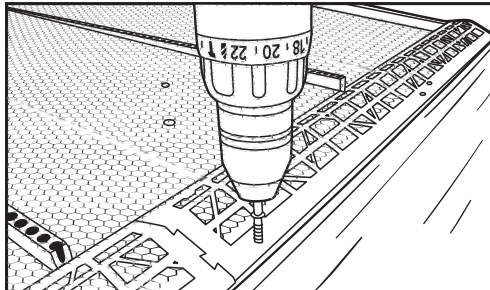

4. After Handi-Kirb and prepitch float sticks are installed, fill both prepitch and Handie Kirb with a high solids latex fortified underlayment.

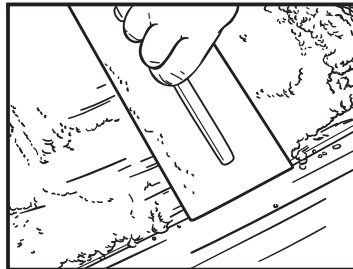

5. Allow cement mix to dry and install sheet water proofing membrane to manufacturer's specifications.

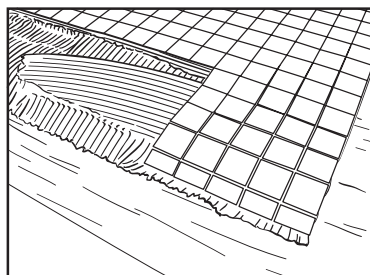

6. Tile

Manufactured by:
Mark E. Industries
28921 US Hwy. 19 N., Clearwater, FL 33761
Toll Free 1-866-771-9470
www.markeindustries.com
e-mail: info@markeindustries.com